

## GM-2 CONTROL UNIT FOR INTERLOCK SYSTEM

### INSTRUCTION SHEET



**GM-2**

#### Safety

The user is responsible to ensure that regulations within the Health & Safety at Work Act 1974 are complied with.

The unit should be installed by a suitably qualified person under I.E.E. regulations and the gas solenoid should be adequately protected.

Also, necessary precautions must be taken, by the installer, with regard to flame failure protection or gas pressure proving in accordance with BS6173 2001.

#### Description

The design of the Gas Minder-2 ensures that there is no gas flow to burners unless air extraction is present.

An IP55 rated enclosure is used to house the unit which is designed to operate with appropriate air proving switches and a 230 volt gas solenoid.

#### Operation

The "Fan Off" indicator will illuminate and no gas flow will be available when the extract or supply fans are switched off, when mains are applied to the unit.

The "Fan Off" indicator will go out and gas flow will be available when the fans are switched on.

A separate on/off facility is available for manual remote switch or volt free contacts operation but gas will be prevented from being switched on if no air extraction is present.

#### Wiring Instructions

The mains supply must be isolated before connection.

The following precautions should also be taken:-

- 1) If remote switch facility is not used leave link in place across remote (on/off) contacts.
- 2) When only the Extract Fan is been used leave the link in place across supply air flow switch contacts.
- 3) Connections between the unit and air flow proving switches must be connected to the common and normally open contacts switches.

In the unlikely event that the unit fail indicator illuminates, switch off the gas manually and replace unit.

F	F	N/C	Comm	N/O	Cmm	N/O	Comm	L	N	N	E	L
Emergency Button		Link		Link				Gas Valve Isolator		Mains Input		
On the unit		Remote		Extractor Airflow		Supply Airflow						
Not connected *		On/Off		Switch		switch						

\*

#### Note:

To connect emergency button on the unit, link either point "F" to point "L" of the mains input on the terminal. The second point "F" should then be used as if "L" of the mains input

#### Typical Installation Schematic

